STINGER A1-1/4-10

FINCO STINGER AMATEUR BAND RADIO ANTENNA INSTRUCTION MANUAL

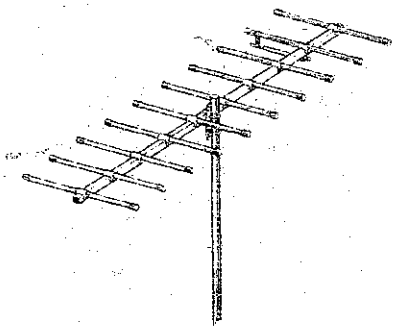

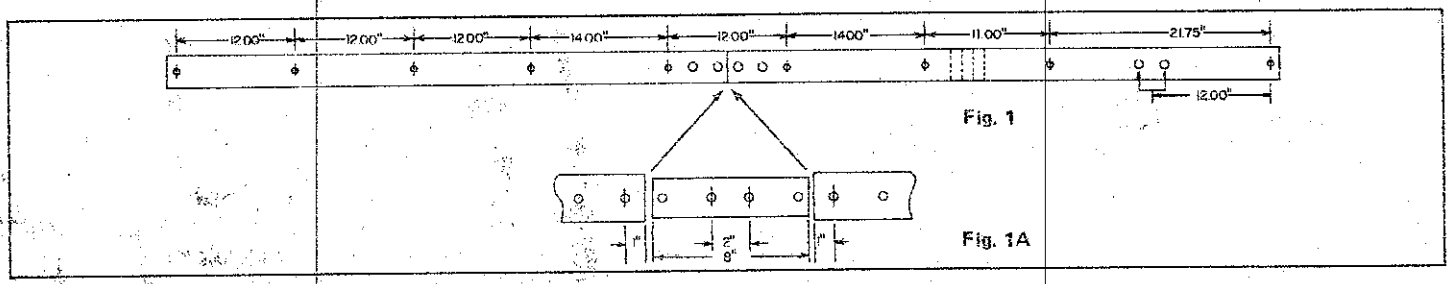

Fig. 1

Fig. 1A

DESCRIPTION

The model Stinger A1-1/4-10 is a 10 element 1-1/4 meter (220 MHz) high performance yagi antenna designed for all 200 MHz communication needs. Designed to be mounted in either the vertical or horizontal plane, the A1-1/4-10 is adaptable for OSCAR, repeater, or general communication work. Incorporating the Stinger heavy duty elements, boom and boom to mast assemblies, the antenna easily withstands 120 mph wind loads under 1/4" ice conditions. A low loss gamma matching system assures a low V.S.W.R. and is power rated at 1,000 watts.

WARNING!

The following steps will include assembly and installation. Survey your installation site NOW to preclude your antenna or support from coming into contact with overhead powerlines. FAILURE TO EXERCISE THIS CAUTION CAN CAUSE ELECTROCUTION.

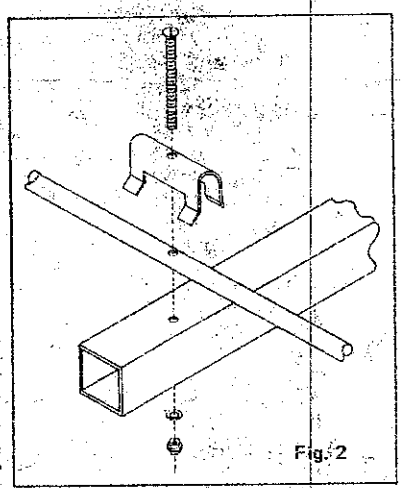

Fig. 2

SPECIFICATIONS

ELECTRICAL		MECHANICAL	
Forward Gain	13.8 dB	Boom Length	8 ft.
Front to Back Ratio	25 dB	Longest Element	28 in.
V.S.W.R. (at resonance)	1.2:1	Turning Radius	4.3 ft.
Half Power Beam Width	40°	Maximum Surface Area	1.32 sq. ft.
Bandwidth	220 to 226 MHz	Wind Load at 80 mph	17.9 lbs.
Impedance	50 ohms	Weight	8 lbs.
Matching System	Adjustable Gamma		

ASSEMBLY

BOOM ASSEMBLY – Referring to Figure 1, select the 56" and 57" pieces of square boom stock. Locate the 8" x 1-1/8" round boom splice.

NOTE: that one end of the two pieces of boom material, the dimension from the end of the boom to the center of the first hole, is 1" (Fig. 1A). These ends will be the splice joint ends.

Assemble the two pieces of boom using the 8" x 1-1/8" round splice joint, being sure to align the holes, fasten the splice using 1/4-20 x 1-3/4" hex head bolts, 1/4" lockwashers, and 1/4-20 hex nuts. Securely tighten the hardware.

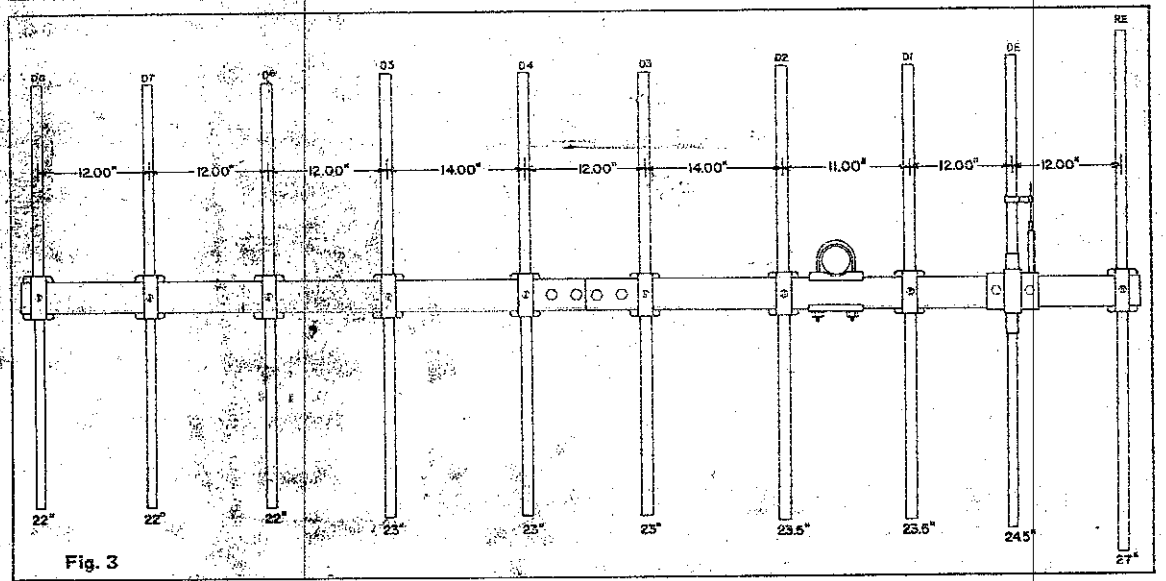

Fig. 3

ELEMENT TO BOOM ASSEMBLY – Referring to Figure 2 and 3 for element placement and position, assemble the reflector (RE) and directors (D1, D2, D3, D4, D5, D6, D7 and D8) as shown. Use the element mounting bracket, a 10-32 x 2-1/4" round head machine screw, #10 internal tooth lockwasher, and 10-32 hex nut for each element. Securely tighten the hardware.

As shown in Figure 4, locate the 1/2" O.D. x 24-1/2" driven element with pre-assembled "element to boom bracket". Mount the driven element (DE) and gamma arm bracket to the boom using two 1/4-20 x 1-3/4" hex head bolts, 1/4" lockwashers

and 1/4-20 hex nuts. Securely tighten the hardware.

GAMMA MATCH ASSEMBLY – Locate the gamma arm assembly. Securely fasten the threaded connector end using the 5/8" I.D. internal tooth lockwasher and 5/8-24 hex nut to the gamma arm bracket. Locate the 1/4" rod clamp and the 1/2" tube clamp. Referring to Figure 5, place the 1/4" rod clamp on the 1/4" rod on the gamma arm assembly and the 1/2" tube clamp on the 1/2" driven element (DE) in the location shown in Figure 5.

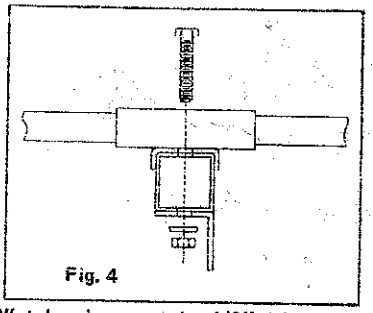
Fig. 4

Locate the 3/8" x 2-1/8" shorting strap and, using 8-32 x 1/2" slotted screws, # 8 external tooth lockwashers and 8-32 hex nuts, assemble the shorting strap to the two clamps. Slide the gamma rod to the 1-7/8" measurement shown in Figure 5. Adjust the 1/2" tube clamp to the 4-1/2" measurement as shown in Figure 5 and tighten the hardware on the 1/2" tube. Then tighten the hardware on the 1/4" rod.

NOTE: This adjustment is critical for proper performance. After installation, if you so desire, you may peak the gamma matching system for best V.S.W.R at your site location. However, the above pre-tested factory measurements generally will give the lowest V.S.W.R. and best match to 50 ohm coaxial cable.

FINAL ASSEMBLY – Loosely assemble the "U-Bolt" and saddle assembly, referring to Figure 6.

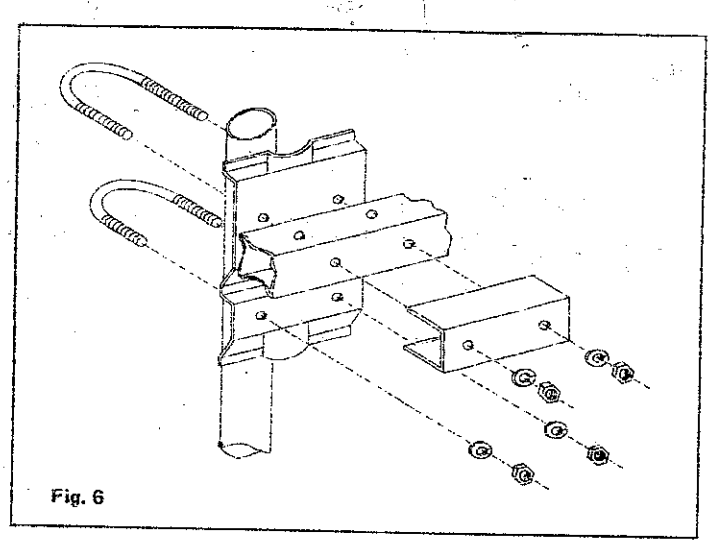
Fig. 6

NOTE: There are two sets of boom holes allowing either vertical or horizontal mounting. Mount the supporting mast to the antenna and tighten the hardware.

Install the 1/2" end caps on the ends of each element, and the two boom end caps.

This completes the assembly of your FINCO STINGER A1-1/4-10.

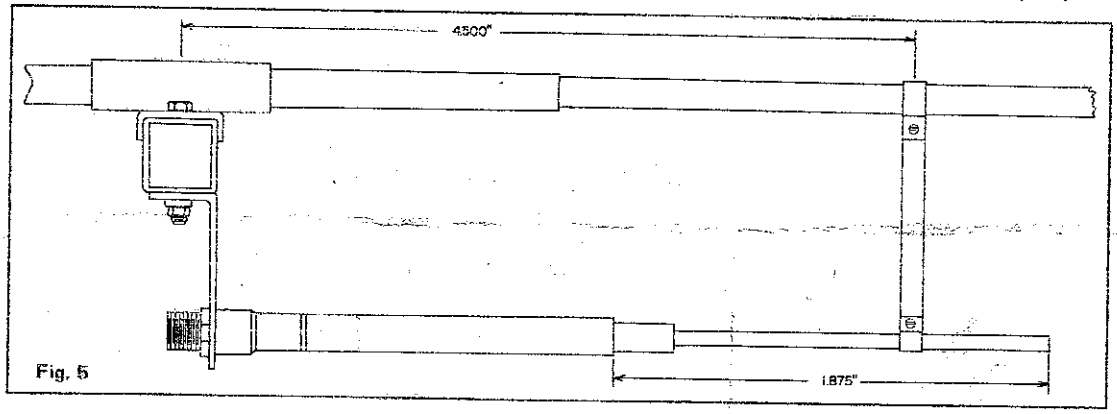

Fig. 5

INSTALLATION

Before installing the antenna on the supporting structure, attach the coax feed line to the gamma arm. It is recommended that you weatherproof this connection with Neoprene or similar rubber compound substance. This will prevent moisture from deteriorating your antenna's performance. Install your antenna keeping in mind the warning on the front page.

MODEL STINGER A1-1/4-10 PARTS LIST

Qty.	Description	Part No.
1	57" x 1-1/4" Square Boom Stock	67232
1	56" x 1-1/4" Square Boom Stock	67233
1	8" x 1-1/8" Round Splice Joint	69620
1	1/2" O.D. x 24-1/2" Element with Boom Bracket	68732
1	1/2" O.D. x 27" Element	68917
2	1/2" O.D. x 23-1/2" Element	68918
3	1/2" O.D. x 23" Element	68919
3	1/2" O.D. x 22" Element	68920
1	Gamma Arm Assembly	10106
1	Gamma Arm Mounting Bracket	23204
1	2-1/8" Gamma Arm Shorting Strap	41201
1	Boom to Mast Mounting Plate	23001
1	Back-up Plate	23002
1	2-3/4" Long "U" Bolt	13400
1	4" Long "U" Bolt	13401
1	1/4" Rod Clamp	21908
1	1/2" Tube Clamp	21971
9	1/2" Element Mounting Bracket	10200
4	5/16" Lockwashers (for U-Bolts)	20102
4	5/16-18 Hex Nuts (for U-Bolts)	30102
1	5/8" I.D. Internal Tooth Lockwasher	20085
1	5/8-24 Hex Nut	13402
2	8-32 x 1/2" Long Slotted Pan Head Screw	10701
2	# 8 External Tooth Lockwashers	20100
2	8-32 Hex Nut	30100
6	1/4-20 x 1-3/4" Hex Head Bolt	10001
6	1/4" Lockwashers	20101
6	1/4-20 Hex Nut	30101
9	10-32 x 2-1/2" Long Round Head Machine Screw	10722
9	# 10 Internal Tooth Lockwashers	20099
9	10-32 Hex Nuts	30103
20	1/2" Element End Caps	24603
2	Boom End Caps	24561

AMATEUR CB TV ANTENNAS FINCO® ACCESSORIES MATV/CATV

THE FINNEY COMPANY

FINCO, the Champion of all Electronic Independent Service!

34 WEST INTERSTATE STREET, BEDFORD, OHIO 44146 ■ 216/232-6161

Form No. 17-5936